CLARiTY
Amplify Your Life

C900™

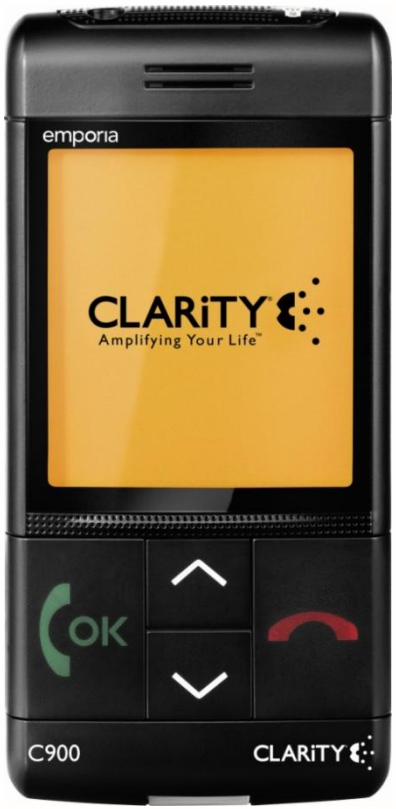

CLARITY
Amplify Your Life

C900

The C900 is a simple, easy to use mobile phone.

The ClarityLife C900 amplifies incoming sound up to 20 decibels and offers large buttons for easy dialing. It also features an Emergency Button that will auto dial 5 preprogrammed numbers. It will be sold unlocked, which will allow the user to take the cell phone and place it on any GSM network, such as AT&T and T-Mobile.

For a full listing of instructions please see the C900 user guide.

C900 Network

The C900 operates on a GSM Network (Global System for Mobile Communications).
Two of the most popular US, GSM service providers are AT&T and T-Mobile.

The ClarityLife C900 will be sold “unlocked”. That means the customer can choose their preferred GSM network. If the customer already has service through one of these providers, they can take their current SIM card and place it into the C900.

Clarity gives the customer the flexibility of choosing their own service provider and a plan that best fits their needs.

C900 SIM Card

A SIM (Subscriber Identity Module) Card is a portable memory chip used in cell phones that operate on a GSM network. If the SIM card has been activated by the service provider, the customer only needs to insert the SIM card into their phone for use. SIM cards hold information, such as cell phone number, phone book information, text messaging and other data. SIM cards can be easily transferred from one mobile to another.

Note: Some SIM cards operate on a pre-paid plan and minutes may need to be purchased.

CLARITY
Amplify Your Life

C900 Features

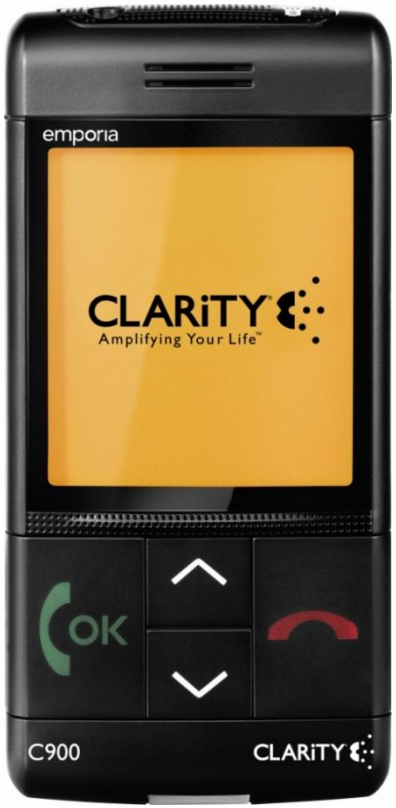

- Amplifies up to **20 decibels**
- **Unlocked** cell phone that will operate on any GSM network
- **4-button operation**
- Programmable **Emergency Button**

- **Hearing Aid Compatible**
- **Large** backlit **screen** with **large text**
- **Large Buttons**
- **Visual** and Vibrating **Ringer**

- Program **phonebook** by sending **text**
- Built in **Flashlight**
- **200 Phonebook** Memory
- Send and Receive **text**

C900 Parts Checklist

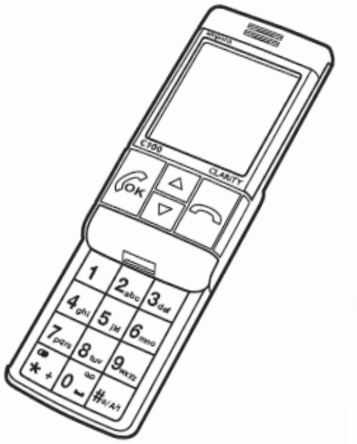

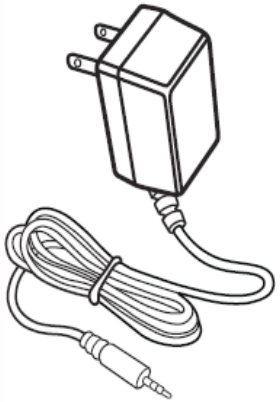

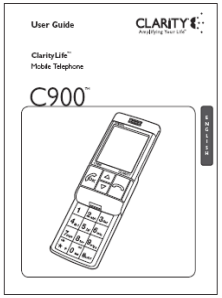

Note: Additional accessories are available

C900 Materials In the Box

- User Guide
- Quick Start Guide
- 5 postcards to send to friends and family notifying them that they are an Emergency Contact
- Service Brochure

C900 Installation
SIM

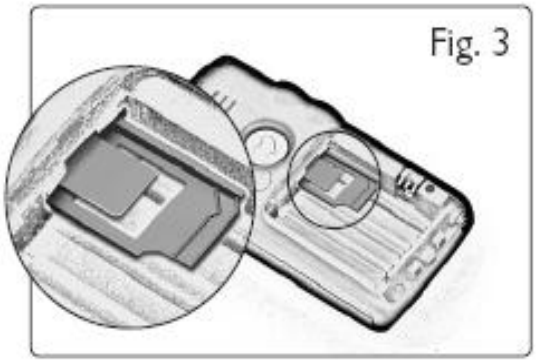

1. Open the battery compartment door.

2. Pull out the SIM card holder. It is located underneath the Emergency Button.

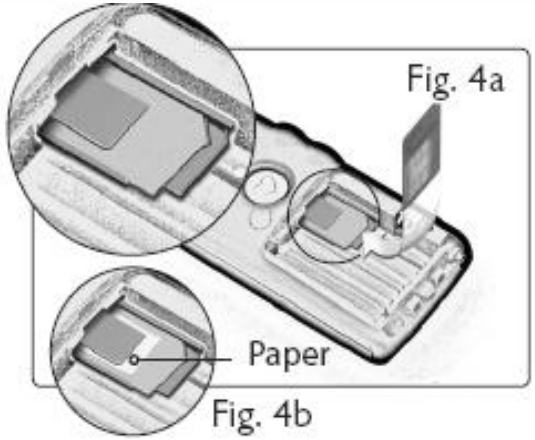

3. Insert the SIM card into it holder with the gold colored contacts facing down with the missing corner card on the bottom right.

4. Slide the SIM card holder back into its slot.

C900 Installation
Battery and Charging

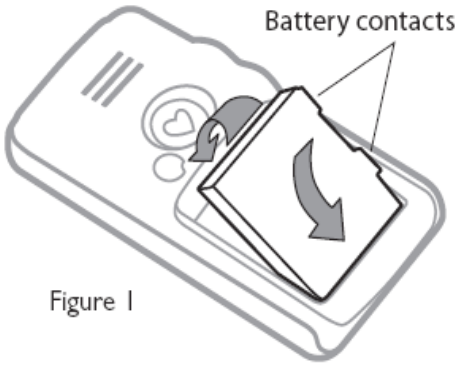

Figure 1

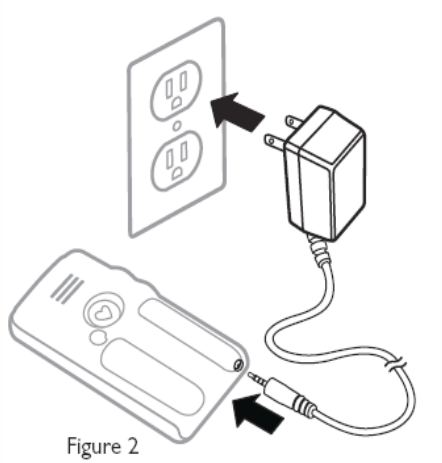
Figure 2

1. After inserting the SIM card, insert the battery. The battery contacts must face the gold colored contacts on the mobile phone.

2. Connect the Power Adapter into the the bottom of the C900 and the other end into a 120V wall outlet.

Note: Charge battery four hours before making your first call.

C900 Features

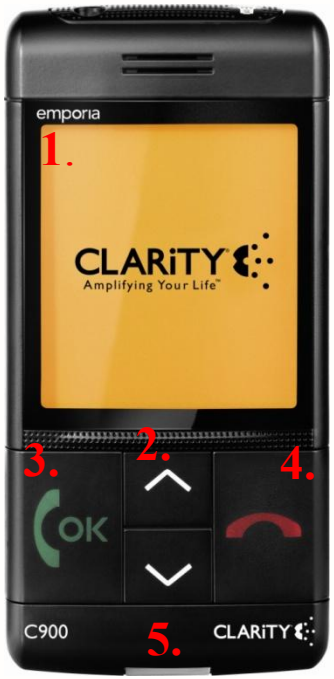

1. **Large Display Screen:** Displays menu

2. **Arrow Keys:** Press to scroll through the menu

3. **Answer/ OK Key:** Press to Answer a Call or to select an option shown on the screen above

4. **End Call/Clear/Back Key:** Press to End a call, to Clear or Back up a space. This key can also be used select an option shown on the screen above.

5. **Alert Lights:** Blinks **Green** for incoming calls
   Blinks **Red** when battery needs to be charged
   Blinks **Orange** during charging and remains on when the battery is full

C900 Features

Help Button: Press and hold for three seconds to dial 5 preprogrammed Emergency numbers from phonebook.

Volume Control: Press **(+)** or **(-)** to change the volume during a call. The C900 will amplify up to 20 decibels. The volume control can also be pressed to turn off the ring tone while the phone is ringing.

C900 Features

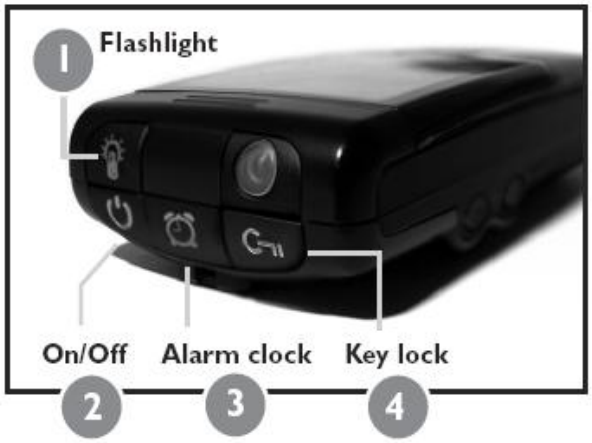

1. **Flashlight:** Light will illuminate while holding down the Flashlight button.

2. **On/Off button:** Press and hold for three seconds to turn the phone On or Off

3. **Alarm Clock:** Press to set Alarm.

4. **Key Lock:** Press to prevent accidental pressing of keys. Press for three seconds to activate or deactivate.

C900 Operation

How to make a call using the Dial Pad

1. Slide open the cell phone and dial the number using the keypad.
2. Call the number by pressing the **Green OK** button.
3. To end the Call press the **Red** button.

How to store numbers into the Phonebook

1. Slide open your mobile phone and scroll to **Phonebook** and select by pressing the **Green OK** button.
2. Scroll to **Add contact** and select.
3. Enter the name of your contact using the keypad and save by pressing the **Green Ok** button.
4. Enter the number of your contact including the area code. Save by pressing the **Green Ok** button

How to make a call from the Phonebook.

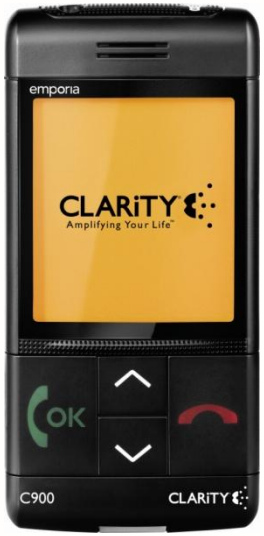

When the slider is closed, the contacts in the phonebook are displayed in alphabetical order.

1. Scroll to and select the name you wish to call.
2. Call the number by pressing the **Green OK** button.
3. To end the Call press the **Red** button.

C900 Emergency Button
Operation

Up to 5 Emergency Numbers can be saved to the Emergency Button. When the Emergency Button is pressed, it will dial the numbers automatically in the sequence you have preselected on your phone.

C900 Emergency Button
Operation

Saving Emergency Numbers

The five Emergency Numbers must be stored in your Phonebook.

1. Slide open the C900 and go to the **Phonebook** setting.

2. Next scroll to and select **Emergency Numbers**.

3. Select **Save Emergency No** and then begin saving numbers under the five allotted spaces. Begin by selecting **Saving Emergency No 1**.

4. The menu will display the phonebook. Scroll through the entries and when the desired one is highlighted, press the OK button.

Saving Emergency Numbers (cont.)

5. The next option is to choose whether the number is “Private” or a “Help Organization”. Choose Private if the number is for an individual. Choose Help Organization if the number is for a Call Center.

6. The last option is to choose whether or not a text message will be sent. Highlight **Yes** or **No** using the arrow keys and press OK to select.

C900 Emergency Button
Operation

What Happens after the Emergency Button is Pressed

Once the Help Button is pressed, the C900 will call the five preprogrammed Emergency contacts. When the called party answers the phone, they will hear the emergency tone and will have to press “0” to activate the call (If contact is designated as Private). If the contact is not reached, the phone will automatically move to the next number. It will repeat this process of dialing 5 numbers up to three times. After the third cycle, if no Emergency contacts are reached, the ClarityLife phone will automatically pick up the next incoming call within one hour.

C900 Technical Specifications

General
Model Number: 900™
Part Number: 50900.000
Frequency: GSM 850 MHz band and 1900 MHz for USA
Amplification: 20 dB

Weights and Dimensions
Dimensions: 4.5 x 2.17 x 1.12 inches
Weight: 5.36 ounces

Battery Information
Battery Type: Li-Ion 3.7v 1000 mAh
Battery Life Talk Time: 180 minutes
Battery Life Standby Time: 150 hours